



REMOTE HANDSET CODING INSTRUCTIONS SUPERLIFT: N3588



TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL

If you have access to the motor operating your door, you can use these instructions. However, if the door/gate motor is shared with other tenants at a residential/commercial complex, **do not** use these instructions.

To code in the remote to operate a SINGLE (1) door ONLY:

1. Ensure your new battery is installed correctly in the new remote
2. Open cover on your CONTROL BOX to access the CONTROL BOX PANEL
3. Press and release the BLACK PROGRAMME button located on the receiver board
4. RED pilot light should begin to flash
5. Press the remote control button you would like to operate the door for ONE SECOND then release, the red light should flash for approximately 3 seconds
6. Press the remote control button again for ONE SECOND then release, the red light should STOP flashing
7. Press the remote control button again for ONE SECOND then release, the red light should flash for approximately 3 seconds
8. When the red light STOPS flashing the programming sequence is complete
9. Press the remote control button to test operation of the door

To code in the remote to operate 2 or 3 DOORS:

1. Remove the cover on each door's CONTROL BOX PANEL.
2. Repeat the above process using a DIFFERENT button on the remote to operate each door

To code in the remote to a motor using DIP SWITCHES:

If you have DIP SWITCHES (small numbered white blocks that have movable positions – usually up, middle and down) they are located behind the snap off cover on the right hand side of the motor head.

1. Remove the snap off cover to access the DIP SWITCHES
2. Set the DIP SWITCHES in the MOTOR to a random pattern of your choice
3. Open the battery cover on the new REMOTE to access the DIP SWITCHES. Set these to the SAME pattern as used in your motor
4. Press the remote button to test operation of the door

TO DELETE ALL STORED CODES FROM A DOOR

Do not do this if the door is shared with other tenants at a residential/commercial complex.

1. Press and hold down the PROGRAMME button – the RED pilot light will come ON
2. When the RED pilot light switches OFF all remotes will no longer operate the door
3. Release the PROGRAMME button

Thank you for your purchase.

Our Customer Support team are available weekdays 8am-5pm on (07) 5476 9227 if you have any further questions.