



REMOTE HANDSET CODING INSTRUCTIONS ATA: KPX5

TO CODE YOUR NEW WIRELESS KPX KEYPAD INTO YOUR DOOR OR GATE

Note: there is a TIMEOUT of approximately 5 seconds – if you take longer than 5 seconds between steps the procedure may not be processed.

TO INITIALLY SETUP THE NEW KEYPAD (this must be done upon KEYPAD installation and before first use otherwise it cannot be coded to any door/gate):

1. Ensure your new battery is installed correctly in the wireless keypad
2. Press and hold Channel 1 - CH1 (see Fig. 1 over page) until a LONG BEEP is heard. Release CH1.
3. Press the factory preset code 1111 then CH1
4. Enter your own unique 4-8 digit code (ie. 1234) then CH1. Repeat within 3 seconds to confirm new code.

Note: You cannot set your unique 4-8 digit code as 1111 or 8888 8888



TO CODE THE KEYPAD TO OPERATE YOUR DOOR/GATE MOTOR:

1. Press and HOLD DOWN the DOOR CODE button on the motor panel (see Fig. 2). Keep it pressed down whilst completing Step 2:
2. Enter your PIN code and press one of the Channel buttons (CH1 – CH4). Press the same CH button again.
3. Release the DOOR CODE button on the motor panel
4. Test entering the Keypad PIN code to operate the door/gate

Note: IF YOU HAVE AN **ATA RECEIVER** follow the above procedures but press **SW1** on the receiver panel, instead of the DOOR CODE button (see Fig. 3 or Fig 4)

TO ADD AN ADDITIONAL/NEW PIN CODE TO OPERATE YOUR DOOR/GATE MOTOR:

1. Press and HOLD DOWN the CH4 button until a long beep is heard. Release CH4 button.
2. Enter your existing PIN code and press CH4
3. Enter the additional/new PIN code and press CH4
4. Repeat Step 3 to confirm the additional/new code is added
5. Test entering the new/additional Keypad PIN code to operate the door/gate

TO CHANGE A STORED PIN CODE:


Warning: Do not change an existing PIN code to 8888 8888 as this will permanently DELETE it. Do not delete all PIN codes from the Keypad memory as this will render the Keypad inoperable and can only be reset at the factory.

1. Press and hold down the CH1 button until a long beep is heard. Release CH1 button
2. Enter your existing PIN code that is to be deleted and press CH1
3. Enter a new PIN code (or make the same as your valid PIN code if no additional code is required)
4. Repeat Step 3 WITHIN THREE SECONDS to confirm the PIN code
5. Test entering the PIN code to operate the door/gate. You should hear a continuous string of beeps

Thank you for your purchase.


Our Customer Support team are available 8am-5pm on (07) 5476 9227 if you have any further questions.

Fig. 1

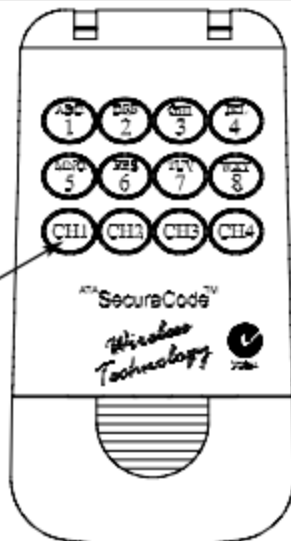


KPX-5 Wireless Digital Keypad

Fig. 2

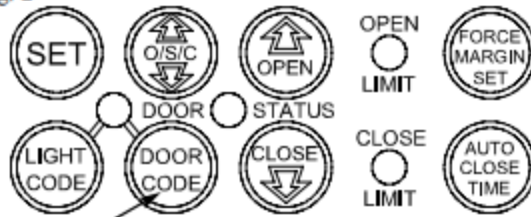


GDO-2 & GDO-4 Garage Door Opener Control Panel

Fig. 3

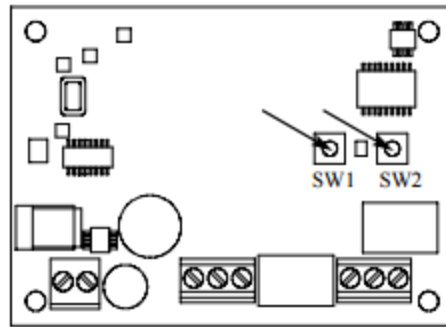

CRX-2 Stand Alone Receiver

Fig. 4

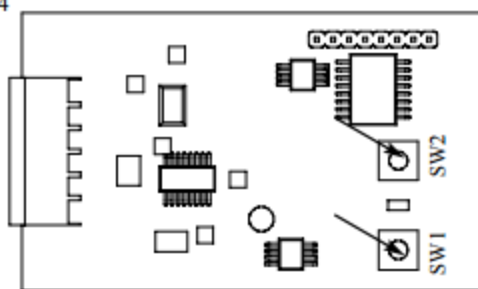

RX-2 Receiver Board

Thank you for your purchase.

Our Customer Support team are available 8am-5pm on (07) 5476 9227 if you have any further questions.