



EAST COAST GARAGE DOORS & GATES

"Transform Your Entrance" BSA LIC # 1120991 ABN 37 792 942 498

P.O. Box 8125 MAROOCHYDORE DC QLD 4558

www. eastcoastgaragedoors.com.au

P: (07) 5476 9227 F: (07) 5476 9208



REMOTE HANDSET CODING INSTRUCTIONS ATA: PTX4 & PTX5



TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL

If you have access to the motor operating your door/gate, you can use these instructions. However, if the door/gate motor is shared with other tenants at a residential/commercial complex, **do not** use these instructions.

- 1. Ensure your new battery is installed correctly in the new remote
- 2. Remove the Plastic shield (IF one is in place) covering your motor panel buttons
- 3. Press and hold down the DOOR CODE button on the motor panel (keep it held down)
- 4. Press the remote control button you would like to operate the door/gate for TWO SECONDS, release the button for TWO SECONDS, then press it again for TWO SECONDS
- 5. Release the DOOR CODE button on the motor panel
- 6. Press the remote control button to test operation of the door/gate

Note: IF YOU HAVE AN **ATA RECEIVER** follow the above procedures but press **SW1** on the receiver panel, instead of the DOOR CODE button

TO CODE YOUR NEW REMOTE USING A WORKING REMOTE

If you have a remote that currently operates a door/gate, you can use these instructions when you are standing in range of the motor (ie. when the motor is on a shared door/gate at an Apartment complex)

- 1. Ensure your new battery is installed correctly in the new remote
- 2. Press the button on the working remote to operate the door/gate
- 3. Press a paperclip/small needle into the hole in the centre of the working remote for TWO SECONDS
- 4. Within the next 10 seconds: Press the new remote control button you would like to operate the door/gate for TWO SECONDS, release for TWO SECONDS, then press again for TWO SECONDS
- 5. Press the new remote control button to test operation of the door/gate

TO DELETE ALL STORED CODES FROM A DOOR MOTOR

Do not do this if the door motor is shared with other tenants at a residential/commercial complex.

- 1. Turn motor power off
- 2. Press and hold down the DOOR CODE or SW1 button
- 3. Turn power on
- 4. Release DOOR CODE or SW1 button
- 5. All remotes will no longer operate the door motor









