



## **EAST COAST GARAGE DOORS & GATES**

"Transform Your Entrance" BSA LIC # 1120991 ABN 37 792 942 498

P.O. Box 8125 MAROOCHYDORE DC QLD 4558

www. eastcoastgaragedoors.com.au

P: (07) 5476 9227 F: (07) 5476 9208



# REMOTE HANDSET CODING INSTRUCTIONS GLIDEROL: TM305C

### TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL


If you have access to the motor operating your door, you can use these instructions. However, if the door/gate motor is shared with other tenants at a residential/commercial complex, **do not** use these instructions.

 
#### To code in the remote to operate a SINGLE (1) door ONLY:

- 1. Ensure your new battery is installed correctly in the new remote
- 2. Open cover on your CONTROL BOX to access the CONTROL BOX PANEL
- 3. Press the DOOR LEARN KEY (item 8 on diagram over page) on the CONTROL BOX PANEL once
- 4. Learn LED light should illuminate (item 8A on diagram over page)
- 5. Press the remote control button you would like to operate the door for TWO SECONDS, release the button for TWO SECONDS, then press it again for TWO SECONDS
- 6. Release the DOOR LEARN KEY (item 8 on diagram over page) on the CONTROL BOX PANEL
- 7. Press the remote control button to test operation of the door

#### To code in the remote to operate 2 or 3 DOORS:

- 1. Remove the cover on each door's CONTROL BOX PANEL.
- 2. Locate the JP1/JP2/JP3 switches (see diagram over) and move the black rubber coil on each control box so that they correspond to the diagram below:

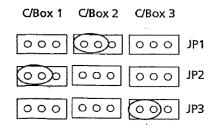



#### TO DELETE ALL STORED CODES FROM A DOOR

Do not do this if the door is shared with other tenants at a residential/commercial complex.

- 1. Press and hold down the DOOR LEARN KEY button for TWELVE SECONDS
- 2. All remotes will no longer operate the door

