



REMOTE HANDSET CODING INSTRUCTIONS HERCULIFT

TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL

If you have access to the motor operating your door, you can use these instructions. However, if the door/gate motor is shared with other tenants at a residential/commercial complex, **do not** use these instructions.

To code in the remote:

1. Ensure your new battery is installed correctly in the new remote
2. Open the cover, if any, on your MOTOR to access the CONTROL PANEL
 - a. On roller door motor model RDOv12 you may need to slide down the light cover on the bottom of the opener to reveal the small red/black LEARN button above the word 'learn'
3. Press and release the LEARN button ONCE, the RED LEARN light should come ON
4. Press the remote control button you would like to operate the door ONCE then release, the red LEARN light should go OFF
5. Press the remote control button again ONCE then release, the red light should START flashing
6. When the red light STOPS flashing, the programming sequence is complete
7. Press the remote control button to test operation of the door

To code in the remote to operate 2 or 3 DOORS:

1. Remove the cover on each door's CONTROL BOX PANEL.
2. Repeat the above process using a DIFFERENT button on the remote to operate each door

TO DELETE ALL STORED CODES FROM A DOOR

Do not do this if the door is shared with other tenants at a residential/commercial complex.

1. Press and hold down the LEARN button for EIGHT SECONDS – the RED LEARN light will come ON
2. When the RED LEARN light switches OFF all remotes will no longer operate the door