



## REMOTE HANDSET CODING INSTRUCTIONS: MERLIN BLUE BUTTON (DIP SWITCH) GREEN BUTTON & GREEN BUTTON MINI (433MHz) C945 & E945M (BEAR CLAWS), C940 & C943



### BLUE BUTTON HANDSET (DIP SWITCH -40.685MHz): TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL:

1. Ensure your new battery is installed correctly in the new remote.
2. Remove the light cover from the CONTROL BOX (MOTOR) to access the control panel.
3. Remove the small rectangular plastic cover on the control panel to access the 12 small 'dip switches'. (refer diagram 1 overleaf)
4. Set the position of the 12 dip switches on your new remote control to identically match the position of those on the motor. (e.g. if number one switch on your motor is in the up position, put the number one switch on the remote in the up position) (refer diagram 2 overleaf)
5. If for any reason you want to change or re-set the dip switches to a different combination on the motor, you will also need to change all of the remote controls to match the motor.

### GREEN BUTTON HANDSET &, GREEN BUTTON MINI HANDSET (433MHz): TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL:

1. Remove the light cover from the CONTROL BOX (MOTOR). Remove the control panel cover to identify the set up controls. Identify the 'LEARN' button and the 'SETUP' button.
2. Press the LEARN button for 1-2 seconds, until the courtesy lamp begins to flash slowly.
3. Press the desired remote button for control of the opener, wait 1 second, press the desired remote button again. The courtesy lamp will stop flashing once learning is complete.

To delete all remote controls from the openers memory: press and hold the 'SETUP' button on the control panel for 11 seconds until the courtesy lamp stops flashing. After 6 seconds the lamp will flash fast as a warning, if you release the setup button during this warning period then the memory will not be wiped.

*Thank you for your purchase.*

*Our Customer Support team are available 8am-5pm on (07) 5476 9227 if you have any further questions.*

**C945 (BEAR CLAW), C940 & C945 & E945M HANDSETS (433MHz) (diagram 3 overleaf): TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL:**


1. Identify the 'LEARN' button located on the CONTROL PANEL of the MOTOR (refer diagram 3 overleaf)
  2. Press and HOLD the desired remote push button that you wish to open the door.
  3. Press and RELEASE the 'LEARN' button on the control panel. The MOTOR light or courtesy LEDs will flash once.
  4. Release the remote push button.
- NOTE: IF YOU RELEASE THE REMOTE PUSH BUTTON BEFORE THE MOTOR LIGHT OR LEDs FLASH, THE MOTOR HAS NOT ACCEPTED THE CODE.**

To delete all remote controls from the openers memory: press and hold the 'LEARN' button on the control panel until the courtesy lights/leds turn off (about 6 – 10 seconds).






**DIAGRAM 1**



**DIAGRAM 2**

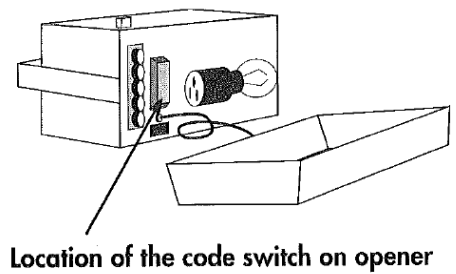

**DIAGRAM 3**

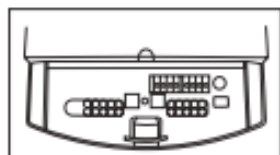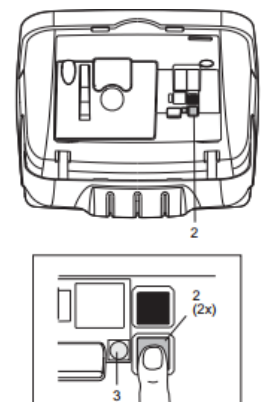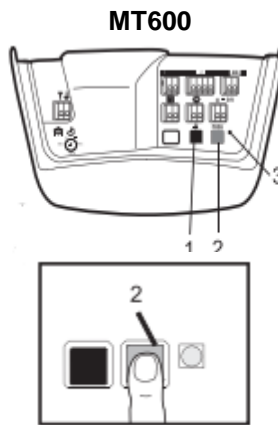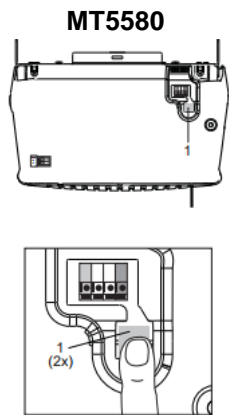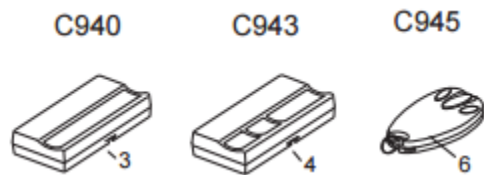

**MR800/a  
MR600a**

**MT60**

*Thank you for your purchase.  
Our Customer Support team are available 8am-5pm on (07) 5476 9227 if you have any further questions.*